
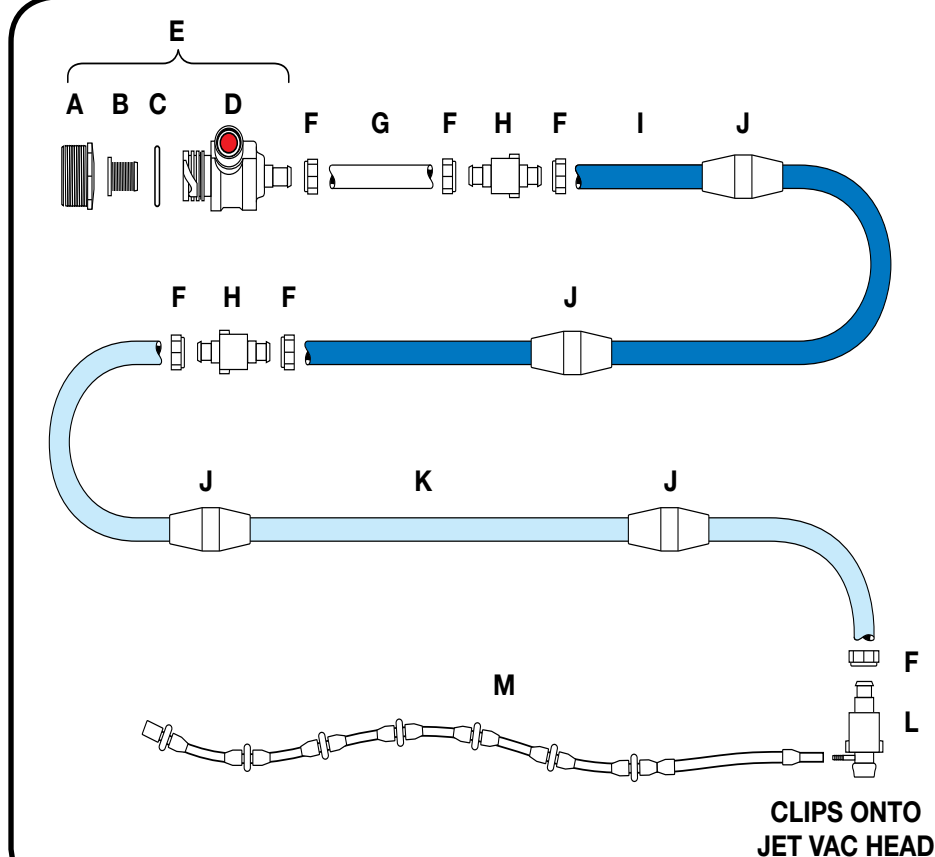


# PARTS DIAGRAM

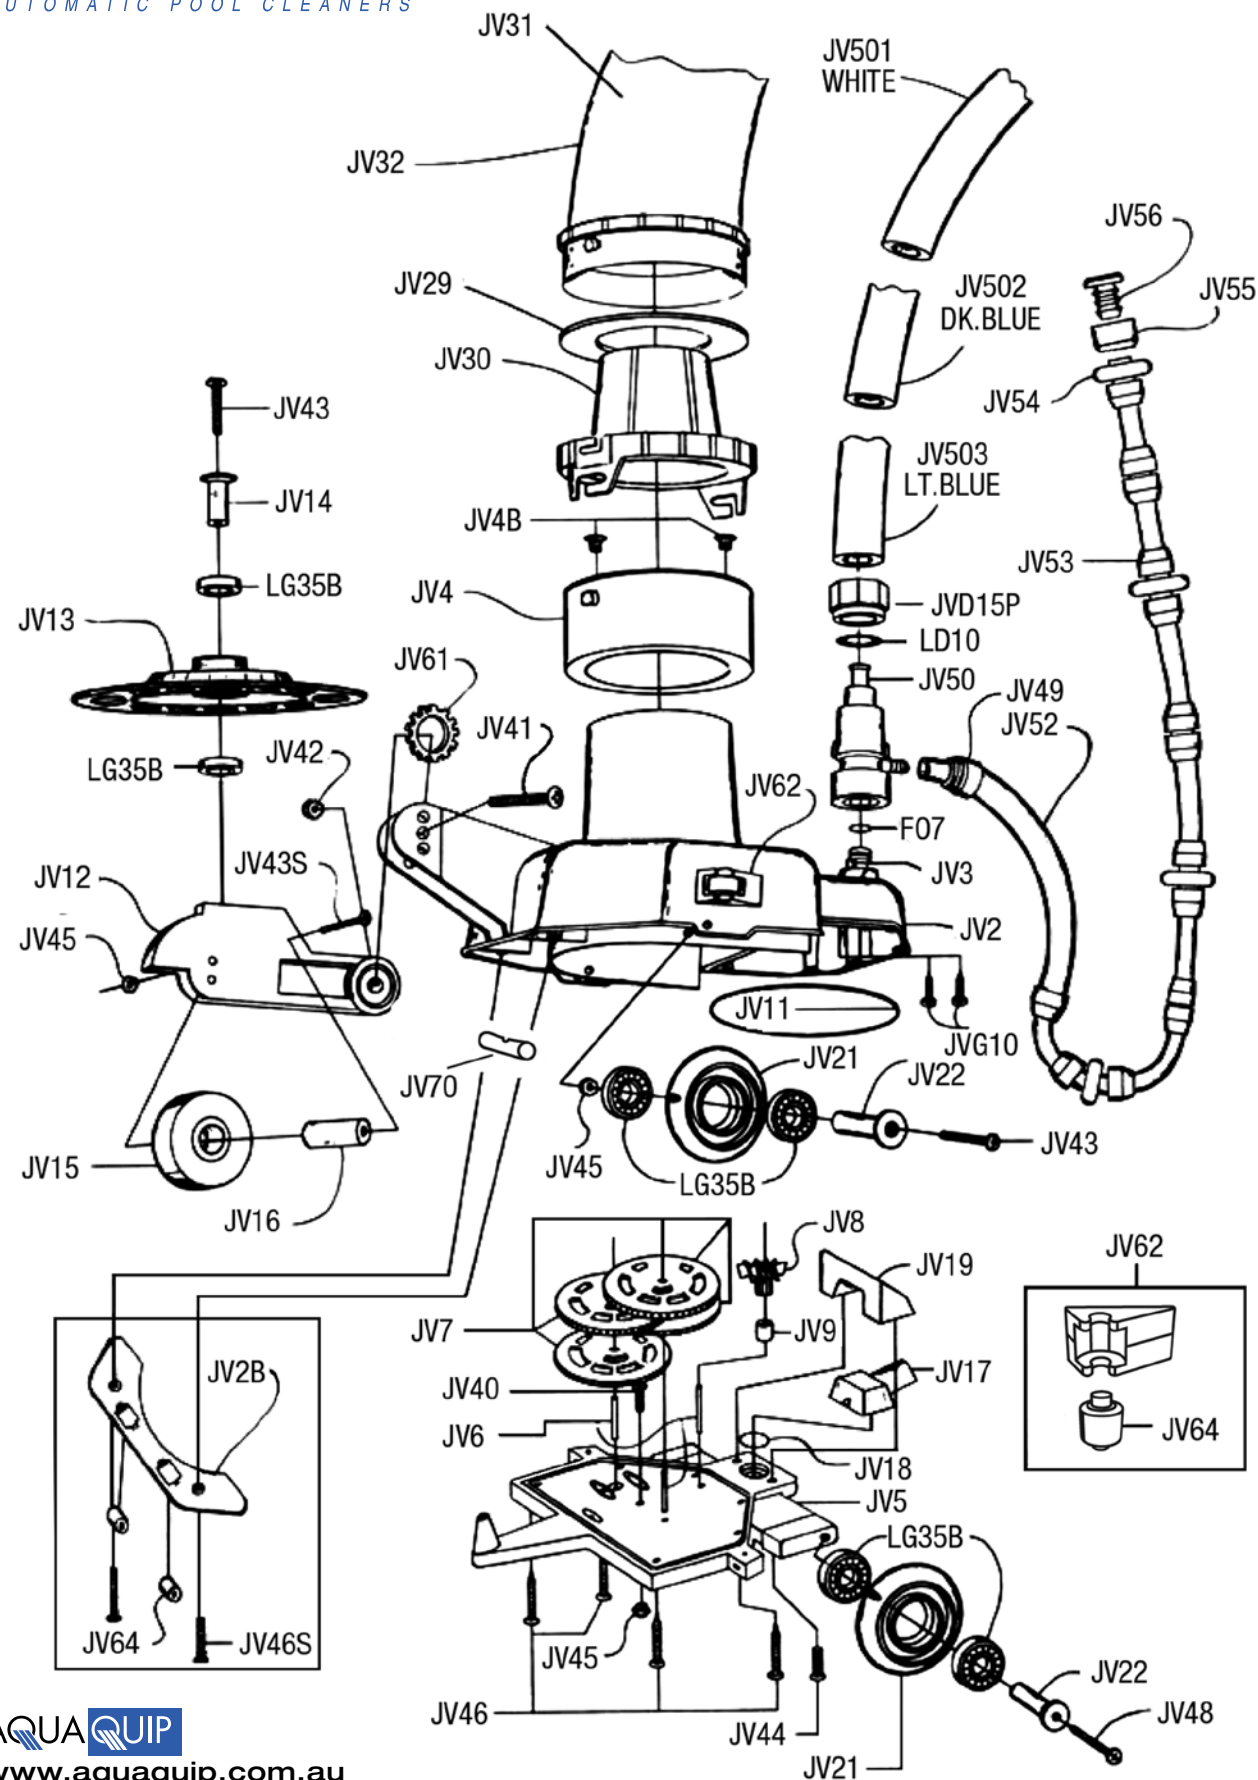

# JET-VAC HOSE DIAGRAM

ITEM	PART #	DESCRIPTION
A	JV23	Quick Disconnect Adaptor
B	JV24	Strainer Screen
C	JV20	O-Ring
D	JV25	Pressure Release Assembly
E	JVW22	Bayonet Wall Fitting Complete
F	JVD15P	Mender Nut
G	JV501	Starter Hose – White (2ft)
H	JVD5	Swivel
I	JV502	Feed Hose – Dark Blue (14ft)
J	JV57	Float
K	JV503	Feed Hose – Light Blue (16ft)
L	JV50	Disconnect Swivel
M	JV52	Sweep Hose Complete

PART #	DESCRIPTION
JVW1A	WALL FITTING COMPLETE W/ADJ
JVW2	STRAINER SCREEN FOR JVW1A
JV2	VENTURI SHELL
JV2B	DEFLECTOR PLATE ASSY
JV3	ADAPTOR
JV4	SHELL FLOAT
JV4B	FLOAT COVER BUTTON KIT
JV5	BOTTOM PLATE
JVD5	SWIVEL
JV6	PIN (FOR BOTTOM PLATE)
JV7	GEAR
JVF7	O' RING
JV8	PROPELLOR
JV9	SPACER
JVG10	SCREW
JV11	O'RING (SHELL)
JV12	ROLLER ARM
JV13	NOSE WHEEL
JV14	NOSE WHEEL HUB
JV15	STAINLESS STEEL WHEEL
JV16	S/STEEL WHEEL HUB
JV17	PUSHER JET NOZZLE
JV18	O' RING
JV19	PUSHER JET NOZZLE HOLDER
JV20	O-RING FOR JVW22
JV21	WHEEL
JV22	WHEEL HUB
JVW22	BAYONET WALL FITTING COMPLETE
JV23	QUICK DISCONNECT ADAPTOR
JV24	STRAINER SCREEN FOR JVW22
JVLL25	PRESSURE RELEASE ASSEMBLY – RED

PART #	DESCRIPTION
JV28	QUICK DISCONNECT 16MM
JV29	GASKET FOR FUNNEL ADAPTOR
JV30	FUNNEL ADAPTOR
JV31	MESH BAG W/LOCK RING
JV32A	FINE BAG W/LOCK RING
LG35B	BEARING
JV40	SCREW
JV41	SCREW
JV42	NUT
JV43	SCREW
JV43S	SCREW
JV44	SCREW (PUSHER JET)
JV45	NUT
JV46	SCREW (BOTTOM PLATE)
JV46S	SCREW
JV48	SCREW (BACK WHEELS)
JV49	TAIL MENDER
JV50	DISCONNECT SWIVEL
JV52	SWEEP HOSE COMPLETE
JV53	HOSE SLEEVE
JV54	ROLLER RING
JV55	HOSE JET COLLAR
JV56	HOSE JET
JV57	FEED HOSE FLOAT
JV61	LOCK WASHER
JV62	SIDE WHEEL COMPLETE
JV64	SIDE WHEEL
JV70	BRASS WEIGHT – LARGE
JV501	STARTER HOSE (WHITE)
JV502	FEED HOSE 1ST SECTION (DARK BLUE)
JV503	FEED HOSE 2ND SECTION (LIGHT BLUE)